



SPARES FOR ROYAL ENFIELD AND AMAL

EMAIL: [info@hitchcocksmotorcycles.com](mailto:info@hitchcocksmotorcycles.com)

WEB: [www.hitchcocksmotorcycles.com](http://www.hitchcocksmotorcycles.com)

HITCHCOCK'S MOTORCYCLES LTD  
ROSEMARY COURT  
OLDWICH LANE WEST  
CHADWICK END  
SOLIHULL  
B93 0EY ENGLAND

TELEPHONE: 01564 783 192

FAX: 01564 783 313

## Fixing Instructions for: WINDSHIELD - 200315

This is a 'universal' windshield. You will receive two sets of fixings – you will not need to use all the fittings supplied. Please follow whichever set of instructions apply.


**If fitting to a Royal Enfield please ignore the GIVI instructions supplied and use these instructions.**

If fitting to other makes please ignore these instructions and use the GIVI instructions supplied.

### Instructions:

These photographs will help with assembly of fixings for your GIVI windscreen when fitted to a Royal Enfield.

1. Remove the two vertical bolts from the handlebar clamp and use them to secure the alloy top bracket to the handlebar clamp through holes arrowed in photograph below right.
2. Assemble the black plastic brackets and the angled metal rods that are located at either end of the alloy bracket. The angled rod will eventually attach to the brackets identified in stage 5 of these instructions.

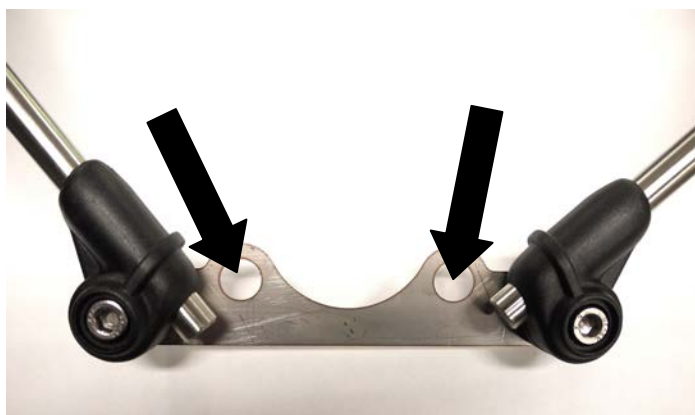

3. Assemble the two brackets around the handlebars using the two straight metal rods and the half circular 'pads' to protect the handlebars. The straight rod will eventually attach to the brackets identified in step 4 of these instructions.



4. Assemble the brackets that secure the screen to the upper fixing points in the screen blade.



5. In a similar way assemble the bracket that will hold the screen to the lower fixing points in the screen blade.

6. When all brackets are assembled the screen blade can be placed and secured. Tighten all fixings with care. Use the black plastic caps to cover exposed fixing screw heads and exposed rod ends.



