



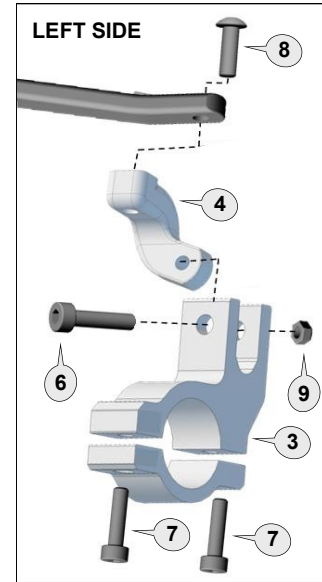

FITTING INSTRUCTIONS for 92713 hand guards and supports ROYAL ENFIELD - Himalayan ('16 on)

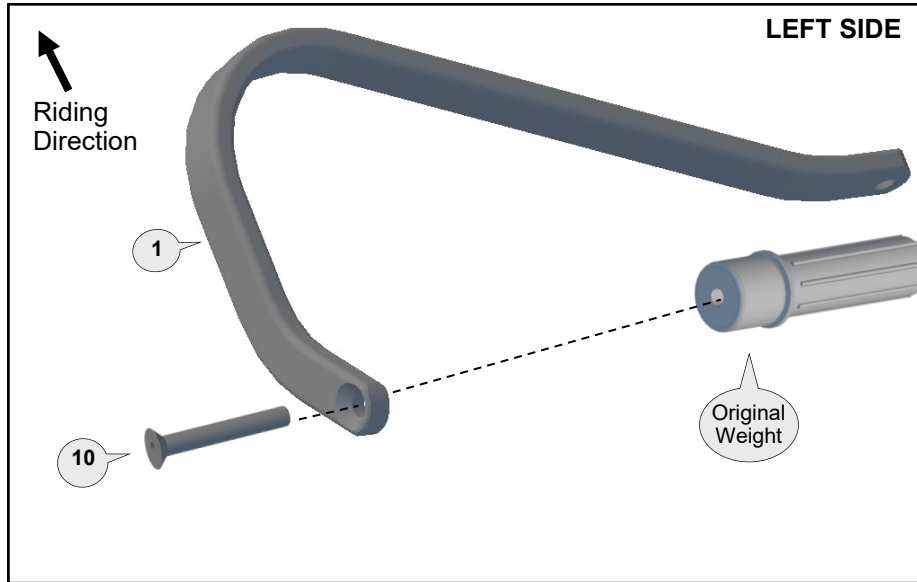

IMPORTANT FITTING TIP:

To avoid the handguard making contact with the windscreen when the steering is at full lock, it is necessary to position the windscreen in the forward position.

See below image for screw location.



For Maximum Clearance

With the four screws loose, gently push forward at the top of the windscreen while tightening the screws.

Preparation:

Remove original handlebar end bolts.

Installation is shown for the left side. Repeat for right side with applicable parts.

- Loosely assemble the clamp to the handlebar with clamp connector (4).
- Attach handguard backbone with applicable parts to the handlebar end (including Original Bar Weight) and also to the clamp connector (4).
- Position backbone so it is horizontal when viewed from the side and tighten all bolts in the following order: (10), (8), (7) then (6).
- Repeat for right side with applicable parts.

Important: Use the specified torque setting over page.

1 Aluminium Bar (left)

PN: BAR-V-030-L
Pcs. 1

2 Aluminium Bar (right)

PN: BAR-V-030-R
Pcs. 1

3 Multi Fit Clamp 22mm

PN: MFC-22
Pcs. 2

4 Connector LEFT

PN: CP8-L
Pcs. 1

5 Connector RIGHT

PN: CP8-R
Pcs. 1

6 Socket Head Bolt 30mm

PN: M6x30SHCSZP
Pcs. 2

7 Socket Head Bolt 20mm

PN: M6x20SHCSZP
Pcs. 4

8 Button Head Bolt 25mm


PN: M8x25BHCSZP
Pcs. 2

9 Taper Nut


PN: M6LN
Pcs. 2

10 Flat Head Bolt 75mm

PN: M8x75FHCSZPFT
Pcs. 2

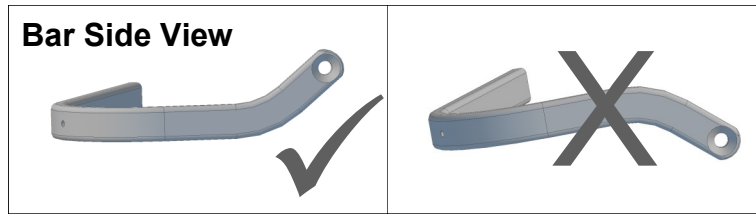

Recommended Torque Settings	
M6	10 Nm (7.4 lbf ft)
M8	20 Nm (14.8 lbf ft)

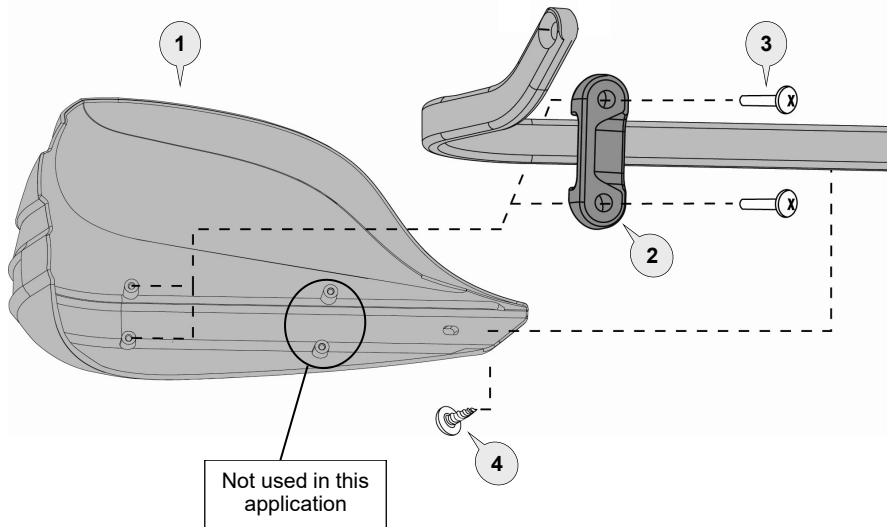

FITTING INSTRUCTIONS for 92713 STORM Replacement Plastic Guards on Royal Enfield Himalayan

1 Storm Plastic

PN: SP1
Pcs. 2(L/R)

2 Saddle

PN: STORM-SADDLE
Pcs. 2

3 Mush Head Screw

PN: SCREWPT3.5x14
Pcs. 4

4 Screw

PN: STSZ811MX11
Pcs. 2

CAUTION:

Installation of the handguard is safety-relevant work and can be complicated. We recommend the installation be performed by a motorcycle service technician. Rideworx accepts no liability for damages caused by improper mounting. All screws, bolts and nuts, including all replacement hardware provided by Rideworx, should be tightened to the torque specification as recommended by Rideworx. After the first 50km of riding check all screws, bolts and nuts are tightened to the correct torque. We recommend a medium strength liquid thread lock product on all fasteners.

WARNING:

Check operation of all handlebar controls, specifically the throttle, front brake, kill switch and clutch to ensure they are operating correctly and are in accordance with the OEM specifications. Do not ride the motorcycle if any controls are not operating correctly. Check periodically that all bolts are tight.

Disclaimer:

A failure to follow these fitting instructions could cause serious injury, death or property damage. These handguards are intended solely for use with motorcycles/ATV/snowmobiles/scooters that have not been modified. They are not designed to prevent injury or death while riding or in an accident or crash. The user must ensure that all controls are free of the handguards every time that they ride. By installing and/or using this product you acknowledge that you accept these terms and have followed the fitting instructions.