



91402 ASSEMBLY INSTRUCTIONS

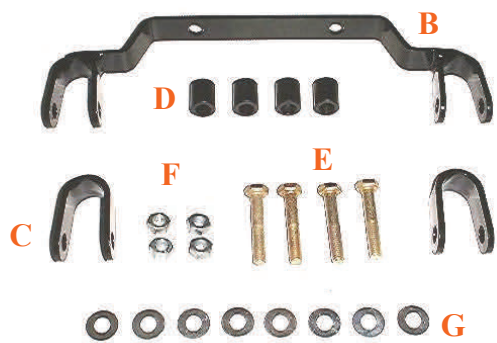


Included in this kit:

- A) Seat
- B) Front bracket
- C) Rear clip x 2
- D) Spacer x 4
- E) Long bolt x 4
- F) 6mm Nuts x 4
- G) Small washer x 8

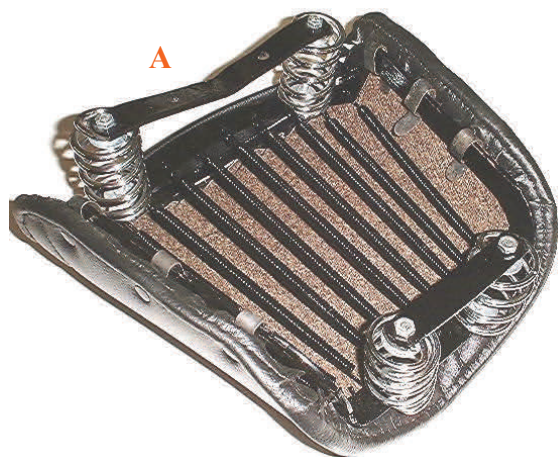


Remove the 4 fixing bolts, nuts, washers and 2 brackets from the standard Pillion seat.

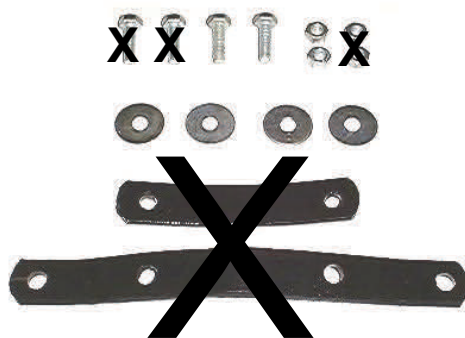

From the parts you have removed retain four of the large washers and 2 of the fixing bolts and nuts. Discard the 2 remaining bolts, nuts and both brackets.

1) Use 2 long bolts with large washers fitted from inside the rear springs, these will pass through the spring, then through one side of the rear clip, then the spacer and then through the other side of the rear clip, use a small washer and nut to lock in position.

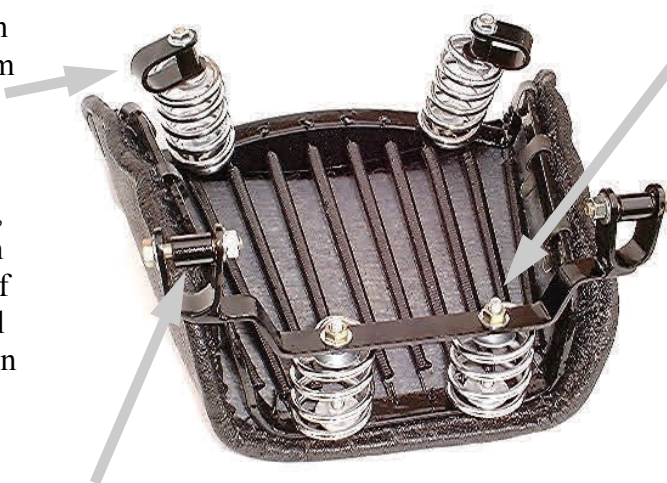

2) Using the 2 small bolts with a large washer on each to attach the front bracket to the front springs. The large washers need to be fitted on the inside of the spring. Use a small washer and nut to lock in position.

3) Use the remaining 2 long bolts, nuts and spacers with a small washer on each side for the front clips. The seat is now ready to clamp on to the rear carrier, part 92541.