

Instructions for fitting seat 91435




Front fixing point

Rear fixing bracket



Remove the original seat.

Carefully place the new seat on the bike and line up the front fixing point to the frame bracket to which it will be attached and pass the bolt through the frame bracket. (N.B. the tube on the frame could be either 8mm or 10mm – use the appropriate fixings supplied)

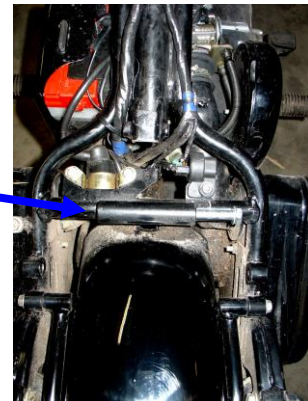

At this stage do not attach the nut to this bolt.

Note the position where the rear bracket 'sits' on the rear mudguard. Apply a length of masking tape or similar (see the photograph). Carefully mark on the tape the position where the two screw holes will attach the bracket to the mudguard.



Remove the seat and carefully drill two holes in the rear mudguard to accept the 6mm fixing bolts (use a 7 mm drill or close equivalent).

Place the seat on the frame and pass the long front fixing bolt through the frame bracket (as shown in the picture above), attach the washer and nut to this bolt. Do not tighten this bolt yet.

Insert the two bolts with their washers and nuts that fix the seat to the rear mudguard, fully tighten these bolts. Now fully tighten the front fixing bolt.