



SPARES FOR ROYAL ENFIELD AND AMAL

EMAIL: info@hitchcocksmotorcycles.com

WEB: www.hitchcocksmotorcycles.com

HITCHCOCK'S MOTORCYCLES LTD
ROSEMARY COURT
OLDWICH LANE WEST
CHADWICK END
SOLIHULL
B93 0EY ENGLAND

TELEPHONE: 01564 783 192

FAX: 01564 783 313

Fixing Instructions for: Rear Carrier Black Classic EFI - P/No 92773

These are the items you will have received in your kit:

- 1 Rear Carrier Black
- 4 M8 x20mm Nyloc Nuts Stainless
- 4 Bolt M8 x 20mm Stainless
- 8 Flat Washers 5/16" Stainless
- 4 Q Clips 16mm Diameter (2 separate pieces per clip)




You will require the following tools :

- 13mm Spanners x 2

Instructions:

Working on one side at a time, attach one Q Clip to the rear of the mudguard rail as in photo below left (Due to variances in mudguards, it may be necessary to apply a bit of thumb pressure to the mudguard or slacken the mudguard to stay bolts to allow the clip to pass between the mudguard and stay). Using the supplied bolt, nut and washers attach the slotted stay of the carrier to the front of the Q clip as shown and lightly tighten.

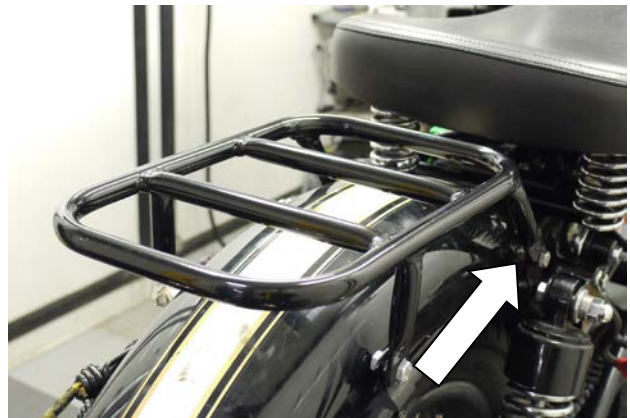

Attach one Q Clip to the front of the mudguard rail as in photo above right. Locate the forward stay of the carrier against the front of the Q clip and pass a bolt and washer through the assembly from behind. Finally secure that bolt with M8 Nut and Washer.

Repeat until all four fixing points are attached. Tighten all fixings and test that all is secure.