



SPARES for ROYAL ENFIELD & AMAL

EMAIL: info@hitchcocksmotorcycles.com
WEB: www.hitchcocksmotorcycles.com


**HITCHCOCK'S MOTORCYCLES LTD
ROSEMARY COURT
OLDWICH LANE WEST
CHADWICK END
SOLIHULL
B93 0EY ENGLAND**

**TELEPHONE: 01564 783 192
FAX: 01564 783 313**

FITTING INSTRUCTIONS FOR 93561 CONTINENTAL SEAT

Parts included in this kit are

1. Continental style seat.
2. Front and rear fixing brackets with screws and washers
3. Two half width lock nuts
4. Two 10mm fixing screws and washers

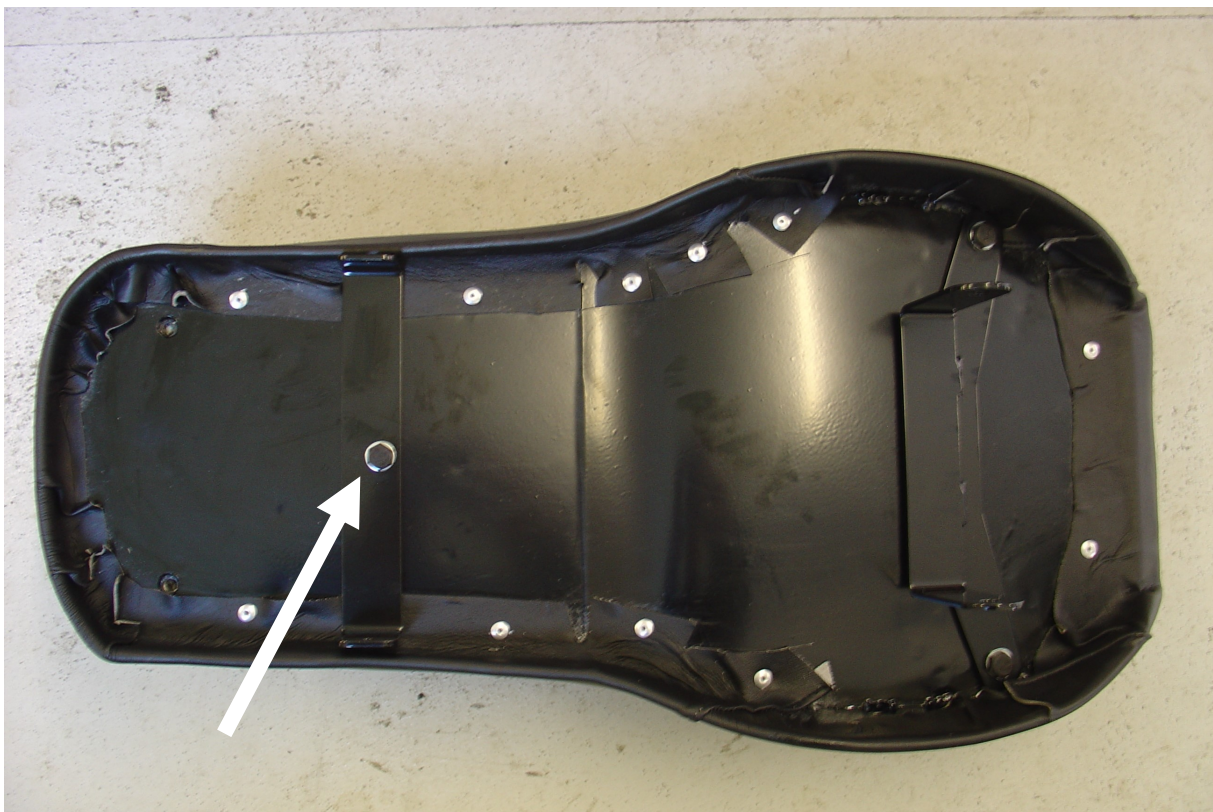


Fitting Instructions

Remove the battery cover and battery.
Remove the air cleaner cover and the air cleaner box.

Fit the brackets onto the seat as per picture above, note the offset on the rear bracket (arrowed).

Using the two supplied half width lock nuts, undo both rear sub-frame fixing studs until the inner end of the stud is just inside the threaded fixing boss.

See picture below.

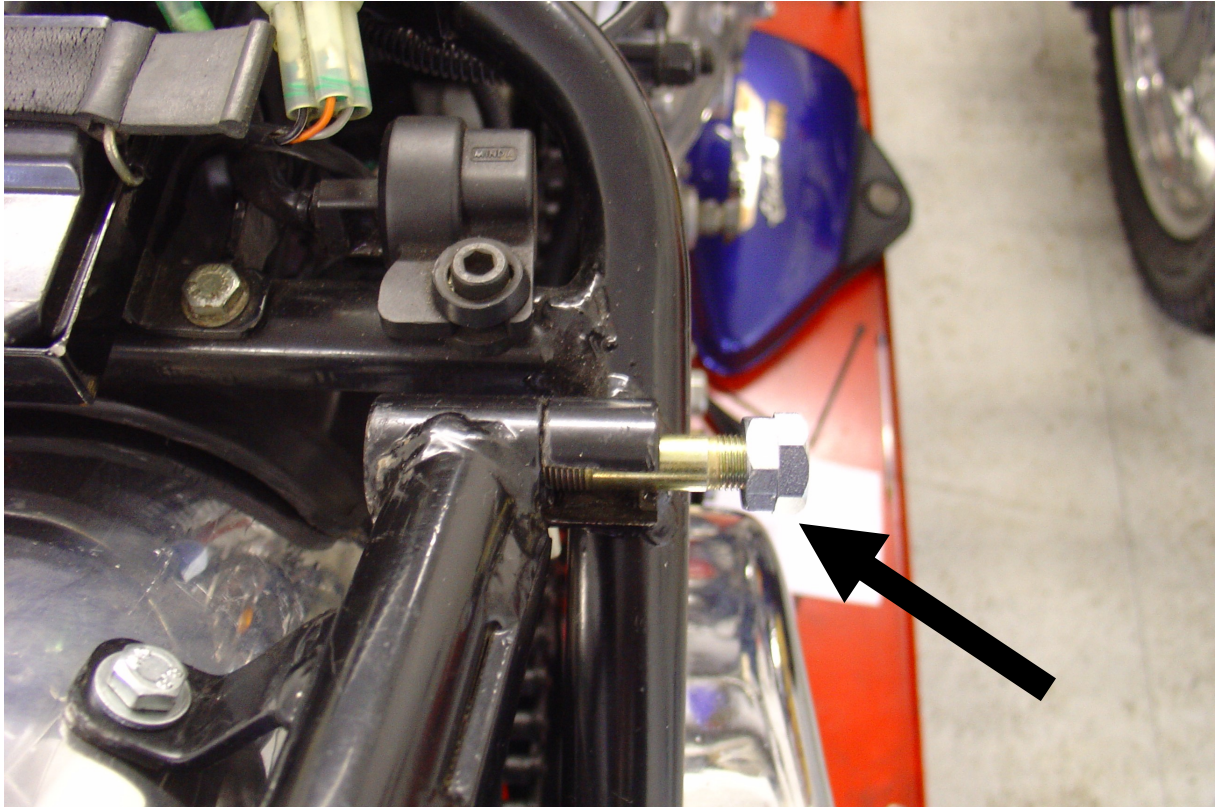

Position the seat so that the two holes on the front fixing bracket are in line with the two rear sub-frame fixing studs.

Screw these two studs in until the end of the thread is reached, ensuring that the studs pass through the holes in the fixing bracket.

Lock the seat bracket onto the studs using the two half width locking nuts.

Replace the two shouldered nuts onto the studs but do not tighten them.

Fit the rear of the seat using the two 10mm screws and washers.

Tighten the two shouldered nuts at the front of the seat.